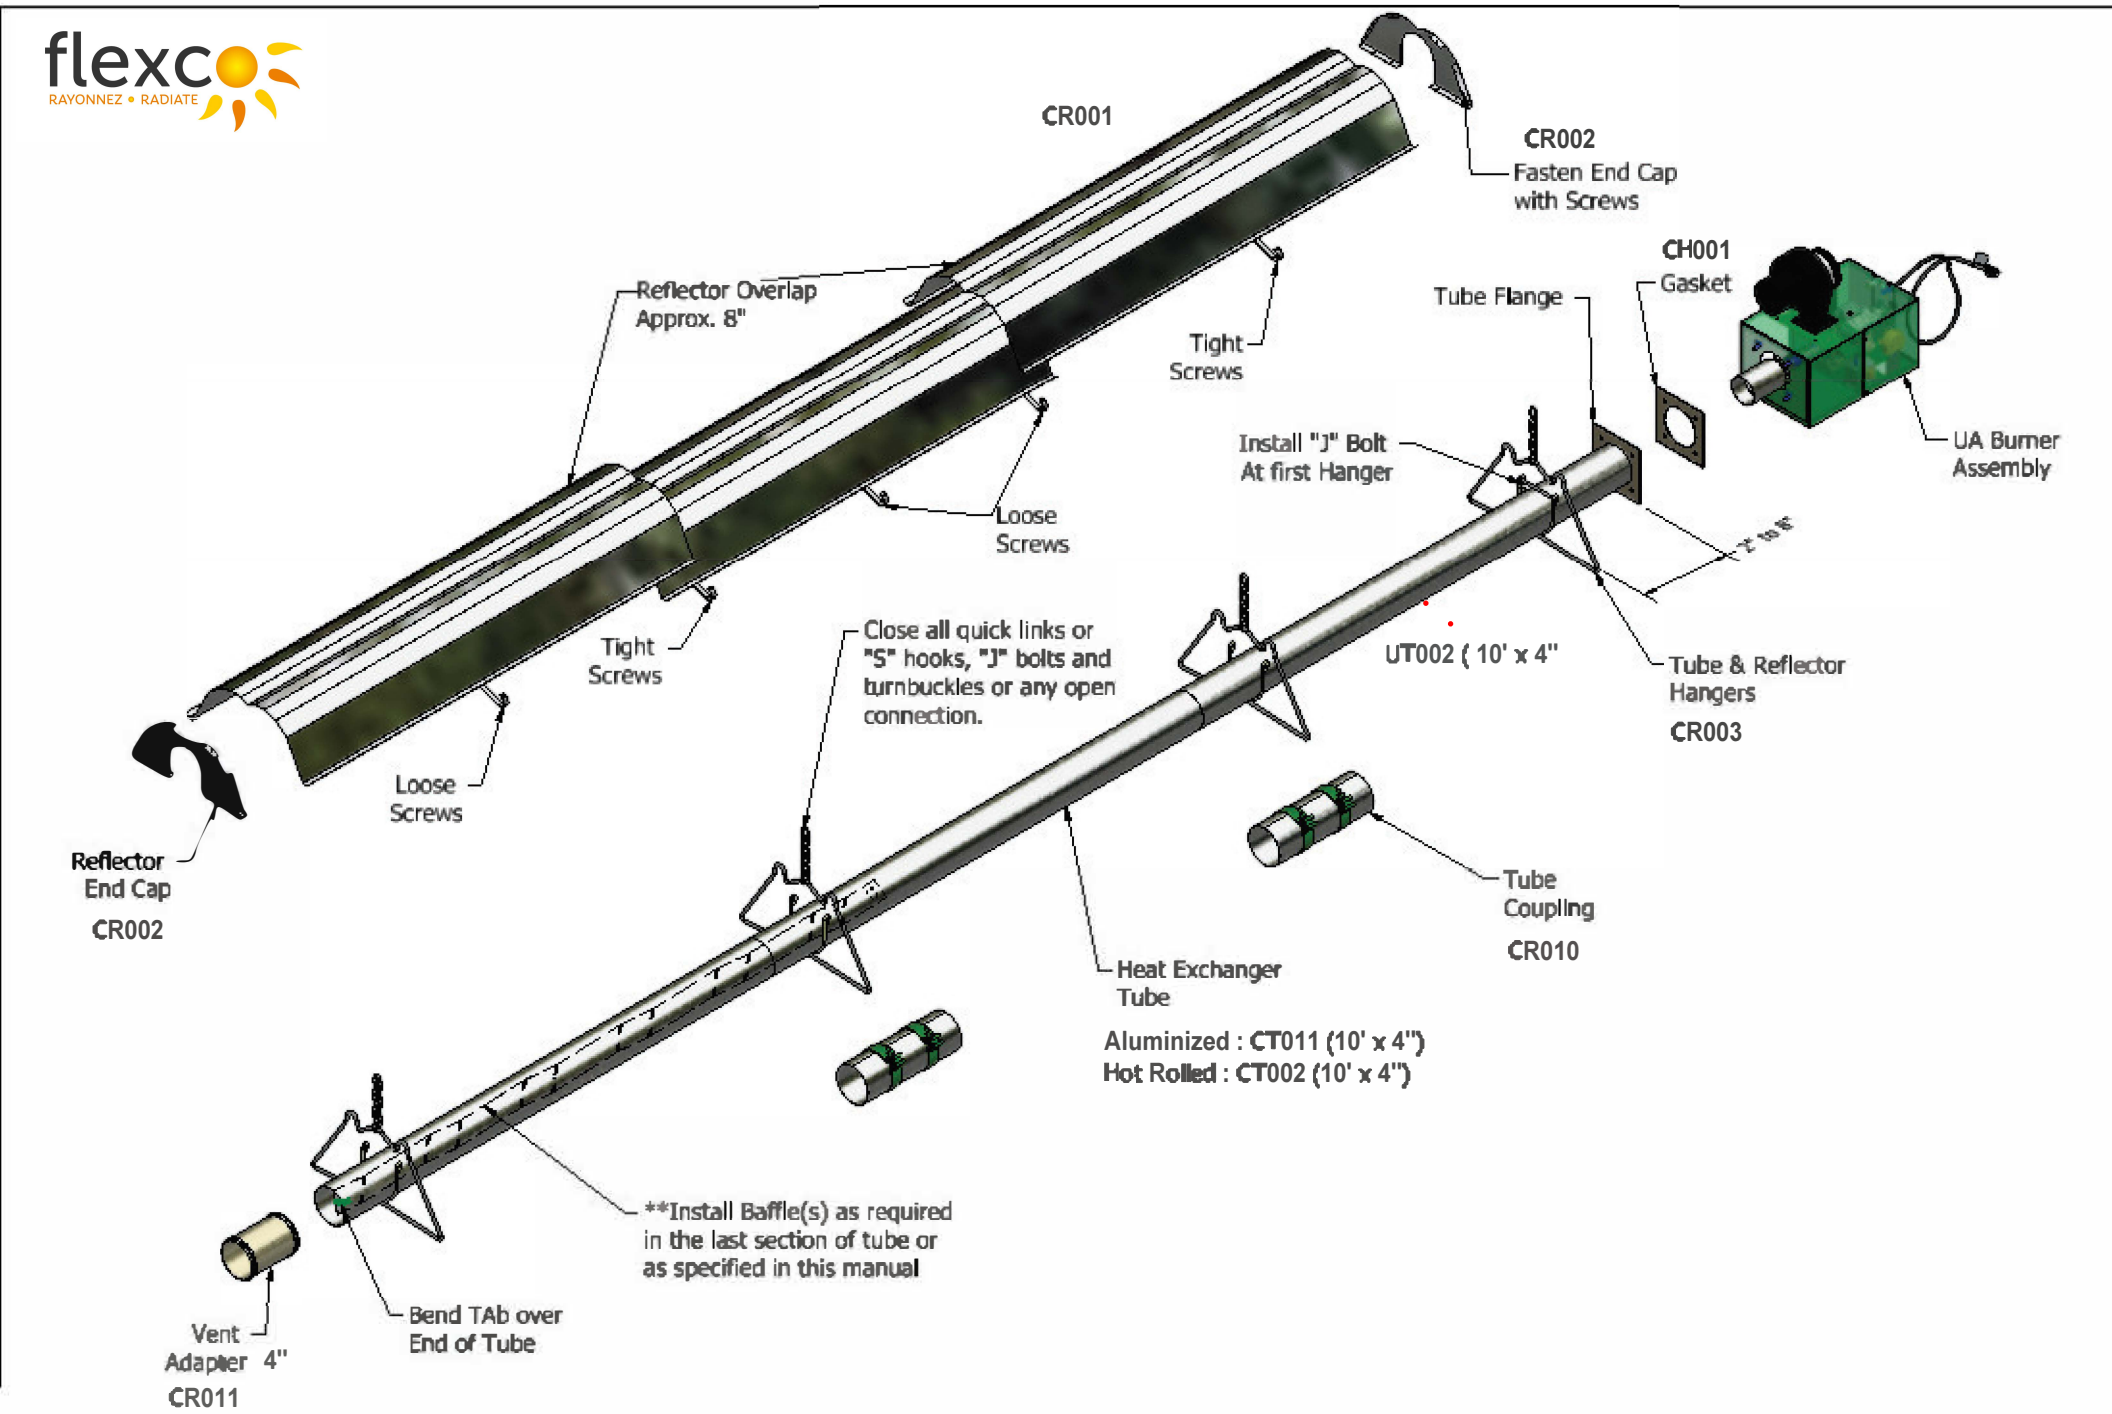
flexco
RAYONNEZ • RADIATE
CR001
CR002
Fasten End Cap
with Screws
CH001
Gasket
Tube Flange
Reflector Overlap
Approx. 8"
Tight
Screws
UA Burner
Assembly
Install "J" Bolt
At first Hanger
Loose
Screws
Tight
Screws
Close all quick links or
"S" hooks, "J" bolts and
turnbuckles or any open
connection.
UT002 (10' x 4"
Tube & Reflector
Hangers
CR003
Loose
Screws
Reflector
End Cap
CR002
Tube
Coupling
CR010
Heat Exchanger
Tube
Aluminized : CT011 (10' x 4")
Hot Rolled : CT002 (10' x 4")
**Install Baffle(s) as required
in the last section of tube or
as specified in this manual
Vent
Adapter 4"
CR011
Bend TAb over
End of Tube